




meccanocar®

Levigatrice rotorbitale ad una mano

Modello
418 00
06500 5689

Serie
A

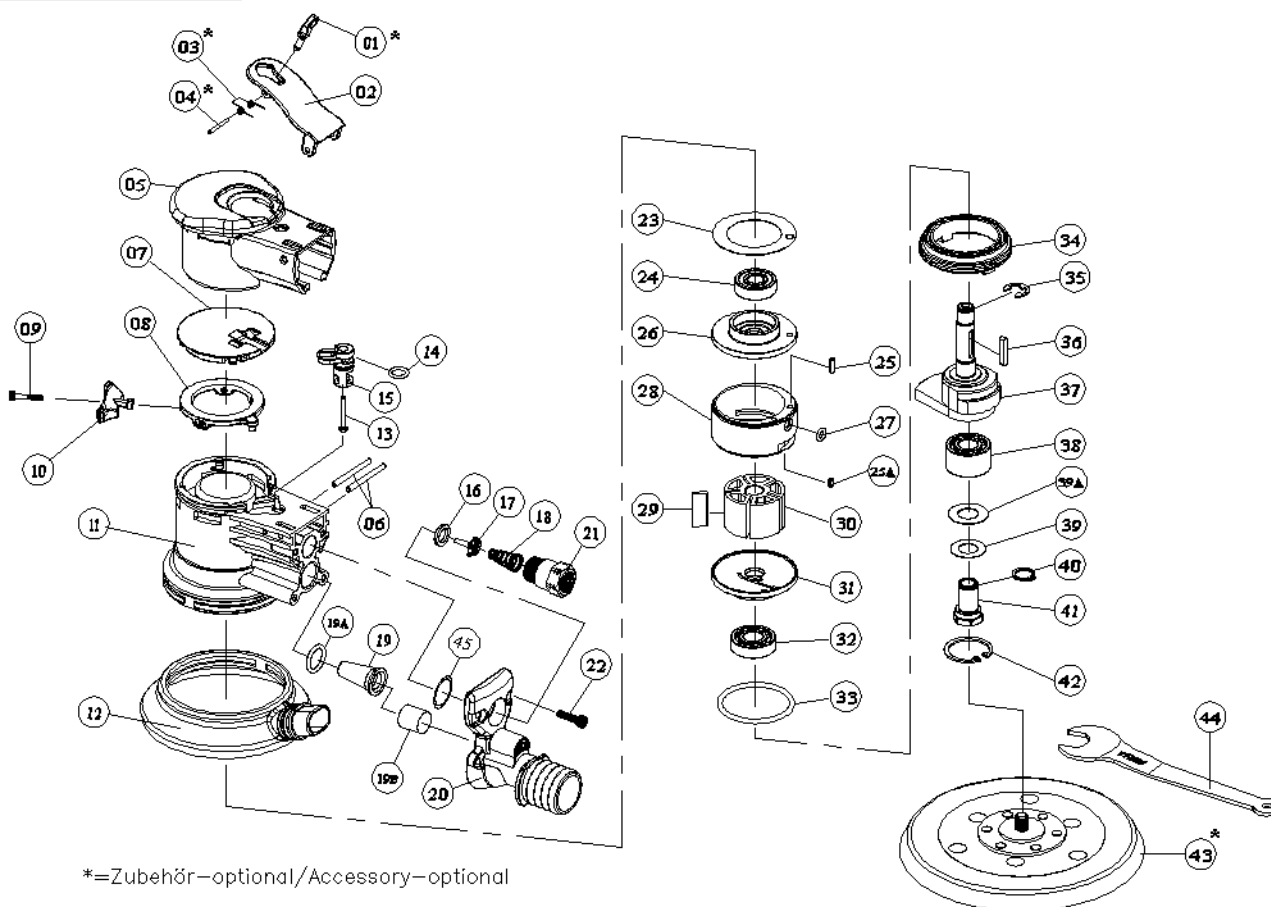

pos.	description/descrizione	pos.	description/descrizione
06500a-01	Latch Safety/Sicurezza	06500a-26	Rear End Plate/Piastra posteriore
06500a-02	Lever/Leva	06500a-27	O-Ring
06500a-03	Spring/Molla	06500a-28	Cylinder/Cilindro
06500a-04	Pin/Spina	06500a-29	Rotor Blade/Paletta
06500a-05	Housing Cover/Copertura	06500a-30	Rotor/Rotore
06500a-06	Pin/Spina	06500a-31	Front End Plate/Piastra anteriore
06500a-07	Cap/Coperchio	06500a-32	Bearing/Cuscinetto
06500a-08	Regulator Ring/Anello	06500a-33	O-Ring
06500a-09	Screw/Vite	06500a-34	Cap Sealing Ring/Anello
06500a-10	Knob/Leva	06500a-35	Safety Washer/Rondella
06500a-11	Motor Housing/Cassa motore	06500a-36	Key/Chiavetta
06500a-12	Pad Cover/Cappa platorello	06500a-37	Crank Shaft/Albero eccentrico 5mm
06500a-13	Valve Pin/Spina	06500a-38	Bearing/Cuscinetto
06500a-14	O-Ring	06500a-39	Bearing Shield/Protezione cuscinetto
06500a-15	Throttle Valve/Valvola	06500a-39a	Dust Protection Washer/Rondella antipolvere
06500a-16	Throttle Valve Seat/Sede	06500a-40	Circlip/Anello elastico
06500a-17	Valve/Valvola	06500a-41	Random Shaft/Albero
06500a-18	Valve Spring/Molla	06500a-42	Circlip/Anello elastico
06500a-19	Brass Muffler/Silenziatore in bronzo	06500a-43	Sanding Pad/Platorello:Acc.
06500a-19a	O-Ring	06500a-44	Wrench/Chiave 17mm
06500a-19b	Muffler/Silenziatore	06500a-45	O-Ring
06500a-20	Tubing Discharge/Tubo scarico		
06500a-21	Air Inlet/Raccordo aria		
06500a-22	Screw/Vite		
06500a-23	End Plate Gasket/Guarnizione piastra		
06500a-24	Bearing/Cuscinetto		
06500a-25	Pin/Spina		

Quando ordinate ricambi indicare sempre il numero di posizione e la descrizione !

08.11.2001 15:15:00

meccanocar/41800065005689_7666A.doc

pagina 1 di 1