


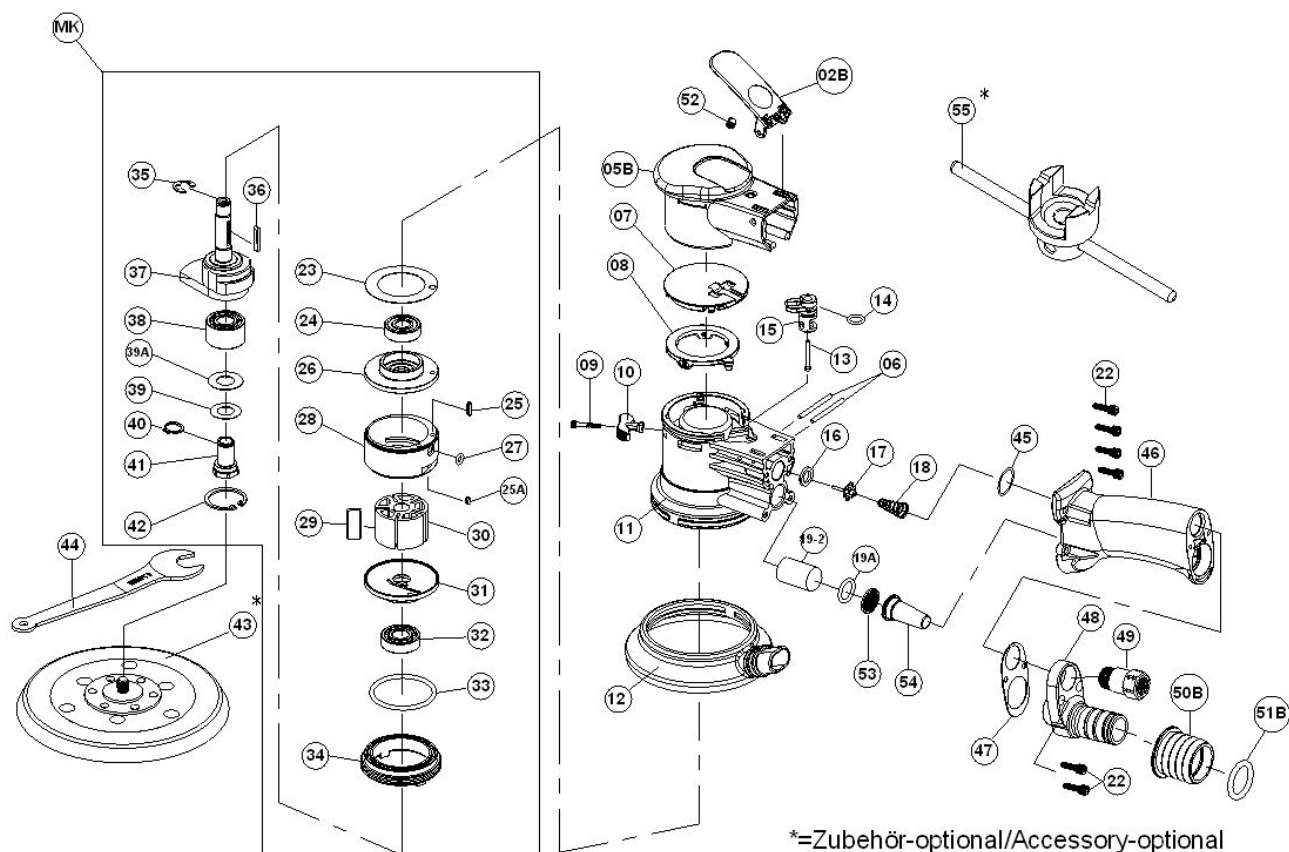

meccanocar

Levigatrice a 2 mani 5mm 2-Handed sander 5mm

Modello
418.00.06800.569

Serie
B


*=Zubehör-optional/Accessory-optional

Pos.	Description	Bezeichnung	Pos.	Description	Bezeichnung
06800b-02	Lever/Leva	Betätigungshebel	06800b-38	Bearing/Cuscinetto	Lager
06800b-05	Housing Cover/Coperchio cassa	Gehäusegummi	06800b-39	Bearing Shield/Protezione cuscinetto	Staubschutz
06800b-06	Pin/Spina (2)	Stift (2)	06800b-39	Dust Protection Washer/Rondella antipolvere	Staubschuttscheibe
06800b-07	Cap/Coperchio	Kappe	06800b-40	Circlip/Anello elastico	Seegering
06800b-08	Regulator Ring/Anello regolazione	Reguliererring	06800b-41	Random Shaft/Albero eccentrico	Gewindenschaft
06800b-09	Screw/Vite	Schraube	06800b-42	Circlip/Anello elastico	Seegering
06800b-10	Knob/Manopola	Regulierknopf	06800b-43	Sanding Pad/Acc.-Platello/Acc.:847079*Opt*Rich*	Schleifteller/Zub.:847079*Op
06800b-11	Motor Housing/Cassa motore	Motorgehäuse	06800b-44	Wrench/Chiave 17mm	Maulschlüssel SW 17
06800b-12	Pad Cover/Cappa aspirazione	Staubglocke	06800b-45	O-Ring	O-Ring
06800b-13	Valve Pin/Spina	Ventilstift	06800b-46	Handle Hold/Impugnatura	Handgriff
06800b-14	O-Ring	O-Ring	06800b-47	Adaptor Gasket/Guarnizione adattatore	Flachdichtung
06800b-15	Throttle Valve/Valvola immissione	Drosselventil	06800b-48	Adaptor/Adattatore	Adaptor
06800b-16	Throttle Valve Seat/Sede valvola	Drosselventilsitz	06800b-49	Air Inlet/Attacco aria	Lufteinlaß
06800b-17	Valve/Valvola	Ventil	06800b-50	Hose Adapter/Adattatore tubo	Absaug Schlauchanschluß
06800b-18	Valve Spring/Molla valvola	Ventilfeder	06800b-51	O-Ring	O-Ring
06800b-19	Brass Muffler/Silenziatore in bronzo	Messingschalldämpfer	06800b-52	Steel Plate incl. in part 02b/Piastra incl. # 02b	Stahleinsatz in Teil 02b
06800b-19	Muffler/Silenziatore	Dämpfer	06800b-55	Motor-Spanner/Acc.-Chiave motore/Acc.:842209*Opt*	Motormontageschl./842209*
06800b-19	O-Ring	O-Ring	06800b-mk	Replacement Motor/Motore completo	Austausch Motor
06800b-22	Screw/Vite	Schraube	06800b-rk	Repair kit/Kit riparazione	Reparatursatz
06800b-23	End Plate Gasket/Guarnizione piastra	Motorendplattendichtung	06800b-tk	Tune up kit/Kit messa a punto	Wartungssatz
06800b-24	Bearing/Cuscinetto	Lager			
06800b-25	Pin/Spina	Stift			
06800b-26	Rear End Plate/Piastra posteriore	Motorendplatte, hinten			
06800b-27	O-Ring	O-Ring			
06800b-28	Cylinder/Cilindro	Zylinder			
06800b-29	Rotor Blade/Paletta (5)	Lamelle (5)			
06800b-30	Rotor/Rotore	Rotor			
06800b-31	Front End Plate/Piastra anteriore	Motorendplatte, vorne			
06800b-32	Bearing/Cuscinetto	Lager			
06800b-33	O-Ring	O-Ring			
06800b-34	Cap Sealing Ring/Anello	Gewinding			
06800b-35	Safety Washer/Rondella di sicurezza	Sicherungsscheibe			
06800b-36	Key/Chiavetta	Paßfeder			
06800b-37	Crank Shaft/Albero 5mm	Exzenterwelle 5mm			

Quando ordinate ricambi indicare sempre il numero di posizione e la descrizione !

Bei Ersatzteilbestellungen bitte Positions-Nr. und Beschreibung angeben!

By Spare parts orders pls. indicate Position-no. and Description